COOKTOP PARTS

For Model: WLP34800, WLP34200, WLP34900
(White) (Biscuit) (Black)

30" ELECTRIC RANGE
COIL COOKTOP
Self−Clean Oven

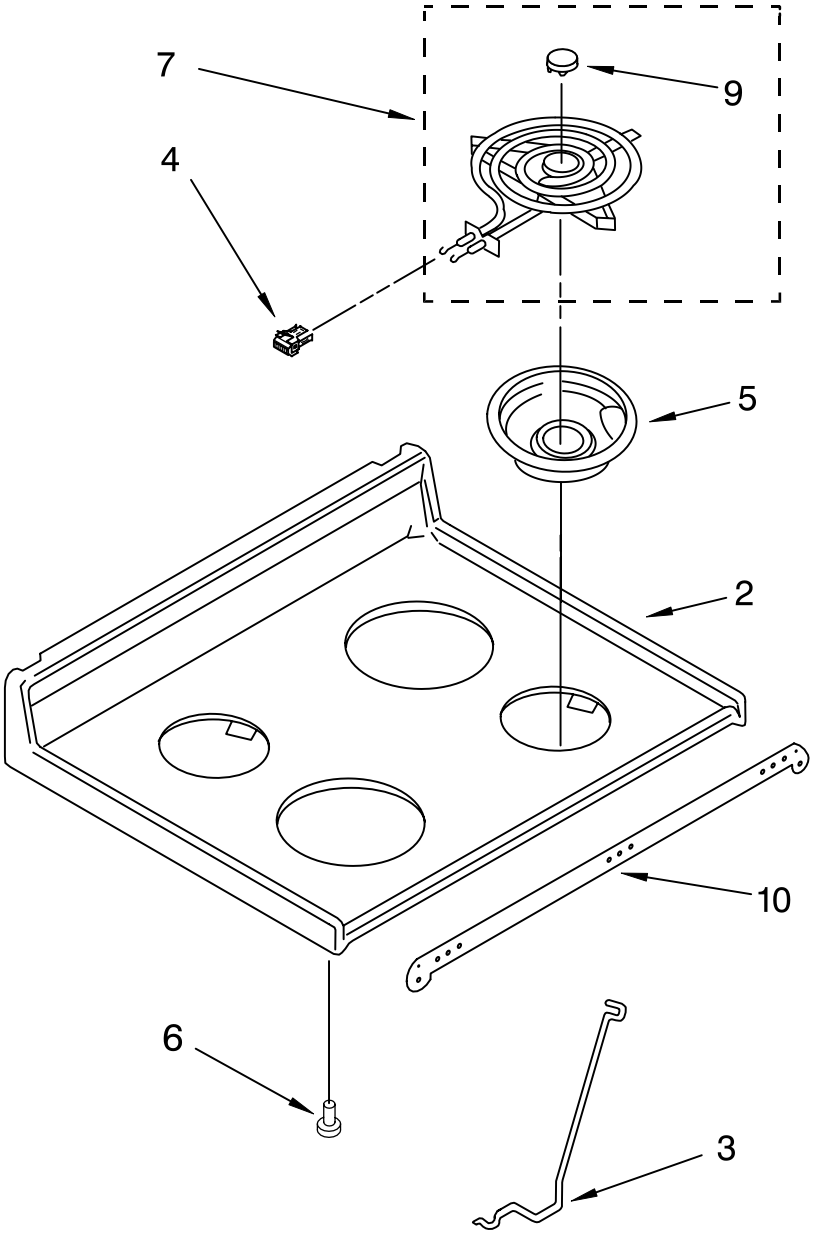

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT9752776	Template, Anti−Tip
	LIT9782234	Wiring Diagram
	LIT9782474	Use & Care Guide
	LIT9782477	Installation Instructions
2		Cooktop, Coil
	9781989GW	White
	9781989GC	Biscuit
	9781989GB	Black
3	9751538	Cooktop Rod (2)
4	9782013	Clip, Receptacle
	9750891	Screw, (4) 6−32 x 1/4
5	3169204	Ring−Bowl 6" (2)
	3169205	Ring−Bowl 8" (2)
6	9750969	Bumper, (2)
7		Element, Surface
	9782074	Coil, 6" RF
	9782075	Coil, 6" LR (Accu−Simmer)
	9782072	Coil, 8" LF−RR
9	4211952	Medallion, (3)
	4211986	Medallion, (Accu−Simmer)
10	9780585	Wire Guard
	9780270	Screw, (2)

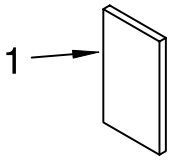

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

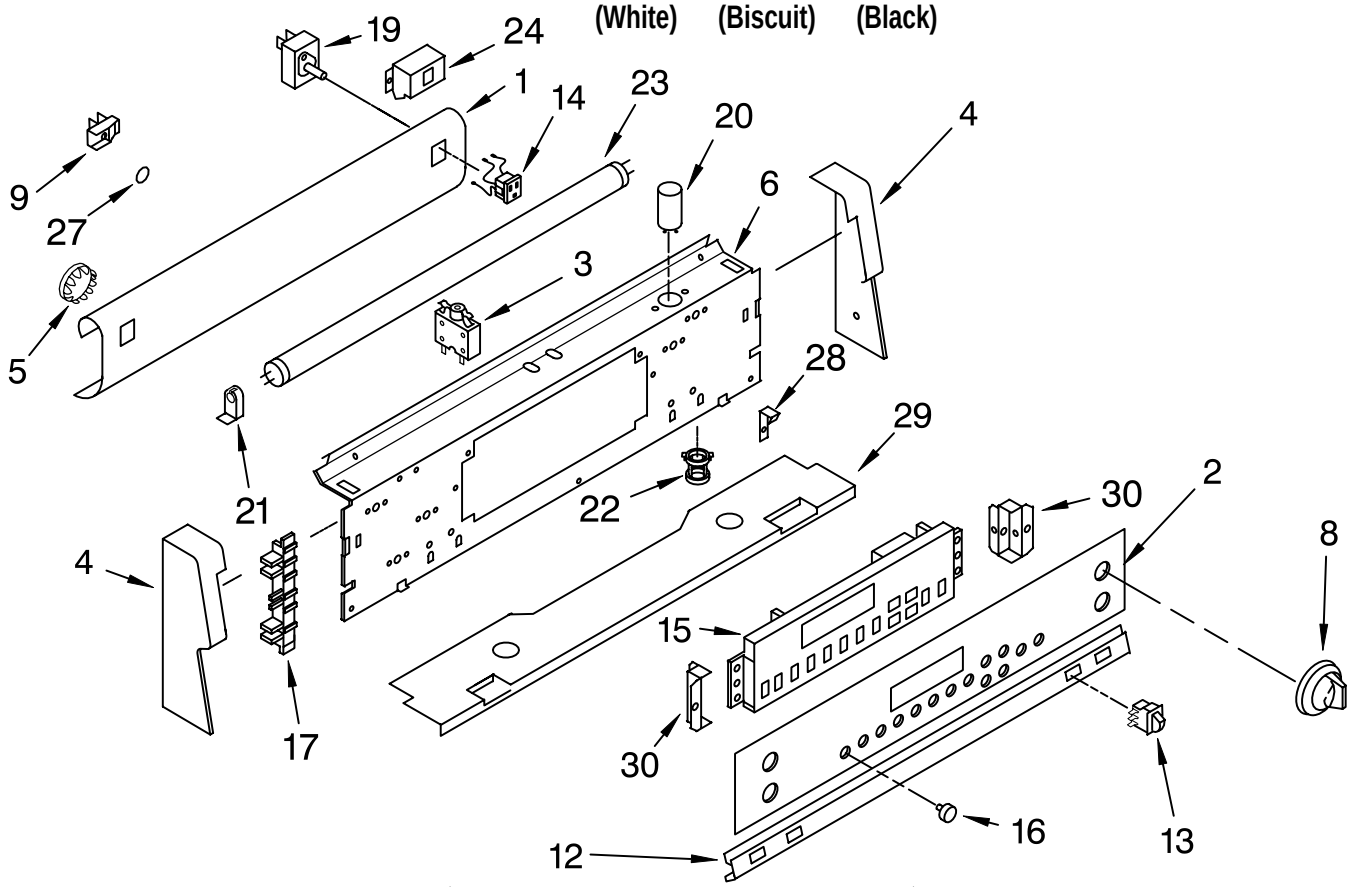

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Lamp Cover
	9755481PW	White
	9755481PC	Biscuit
	9755481PB	Black
2		Console−Glass
	9752815	White
	9755505	Biscuit
	9755530	Black
		(Control Panel)
3	3191072	Breaker, 15 Amp (2)
4		End Cap
	9752422FW	White Left
	9752423FW	White Right
	9752422FC	Biscuit Left
	9752423FC	Biscuit Right
	9752422FB	Black Left
	9752423FB	Black Right
	9780265	Screw (2)
		10 x 3/8
5	9780577	Button, Plug (2)
6	9755511	Panel, Control
	9780852	Screw, (2)
		8 x 3/8
	9752854	Spacer
8		Knobs, Control (4)
	9752405FW	White
	9752405FC	Biscuit
	9752405FB	Black
9	313102	Light, Indicator (2)
		(Burners)
12		Trim Strip
	9752441PW	White
	9752441PC	Biscuit
	9752441PB	Black
13		Switch, Oven Light
	3191102FW	White
	3191102FC	Biscuit
	3191102FB	Black
14		Outlet, Untimed (2)
	9755406FW	White
	9755406FC	Biscuit
	9755406FB	Black
15	9754261	Timer
	9752854	Spacer, Timer
	9780265	Screw, (2)
		10 x 3/8
16		Knob, Timer (17)
	9781954FW	White
	9781954FC	Biscuit
	9781954FB	Black
17		Insert (2)
	9753076FW	White
	9753076FC	Biscuit
	9753076FB	Black
19		Infinite Switch
	9750643	1400W (2)
	9750646	2400W (2)
	3400816	Screw (8)
		8−32 x 3/16
20	9755493	Starter, Light
21	9755492	Lampholder (2)
22	9750866	Starter, Holder
23	9755491	Light, Flourescent
24		Box, Outlet
	9755353PW	White
	9755353PC	Biscuit
	9755353PB	Black
27	9752589	Lens, Indicator (2)
28	9753017	Clip, Spring (2)
	9780265	Screw (2)
29	9752439	Base, Console
	3196168	Screw (3)
30	9753304	Bracket, Timer
	9780265	Screw (4)

DOOR AND DRAWER PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

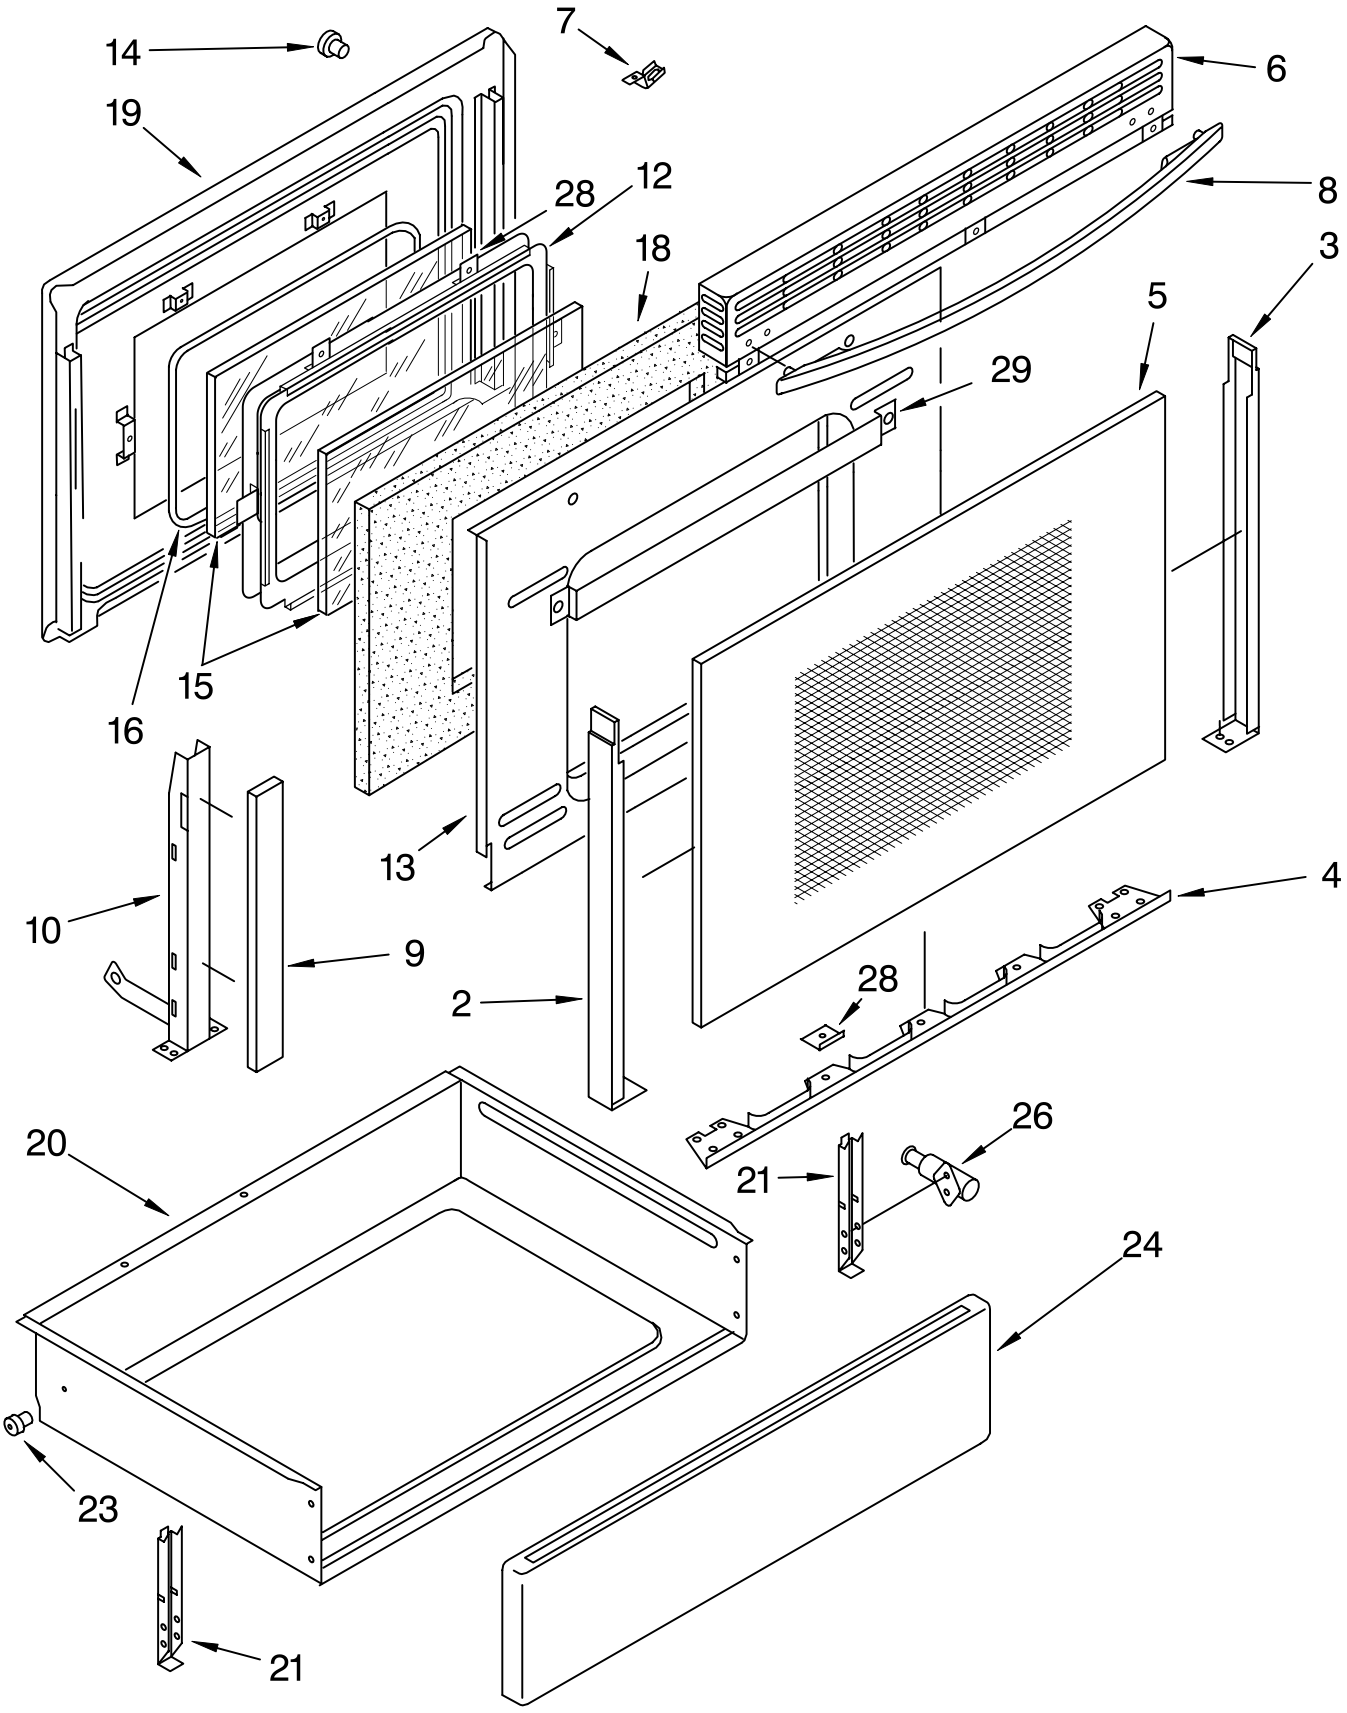

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
2		Trim, Door−Left
	9782003PW	White
	9782003PC	Biscuit
	9782003PB	Black
3		Trim, Door−Right
	9782004PW	White
	9782004PC	Biscuit
	9782004PB	Black
4		Trim, Door Bottom
	9781209PW	White
	9781209PC	Biscuit
	9781209PB	Black
5		Glass, Door Front
	9781635PW	White
	9781635PC	Biscuit
	9781635PB	Black
6		Vent, Door
	9753498GW	White
	9753498GC	Biscuit
	9753498GB	Black
	9781659	Gasket, Vent
	9781072	Screw (4)
7	9750676	Retainer, Door
8		Handle, Door
	9755321FW	White
	9755321FC	Biscuit
	9755321FB	Black
	9781072	Screw, (2) 10 x 3/8
9	9781449	Gasket, Door Glass
	9780265	Screw (4)
10	9782033	Hinge, Door R or L
	9780265	Screw (4) 10 x 3/8
12	9781602	Frame,Glass
13	9781586	Shield, Door
14	9780771	Bumper, Door
15	9781593	Glass,Pyro (2)
16	9755177	Seal, Window
18	9754006	Insulation, Door
19	9781600GM	Liner, Door
20	9750257	Drawer & Roller
21	9750169	Bracket, Drawer
	9780265	Screw (2) 10 x 3/8
	9780272	Screw (4) 10 x 1/2
23	423713	Roller, Support
24		Front, Drawer
	9782108PW	White
	9782108PC	Biscuit
	9782108PB	Black
26	9751248	Latch, Drawer
	9780806	Screw
	90296	Clip
28	9781502	Spacer, Door (8)
	9780265	Screw (8)
29	9750693	Channel, Heat

OVEN CHASSIS PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

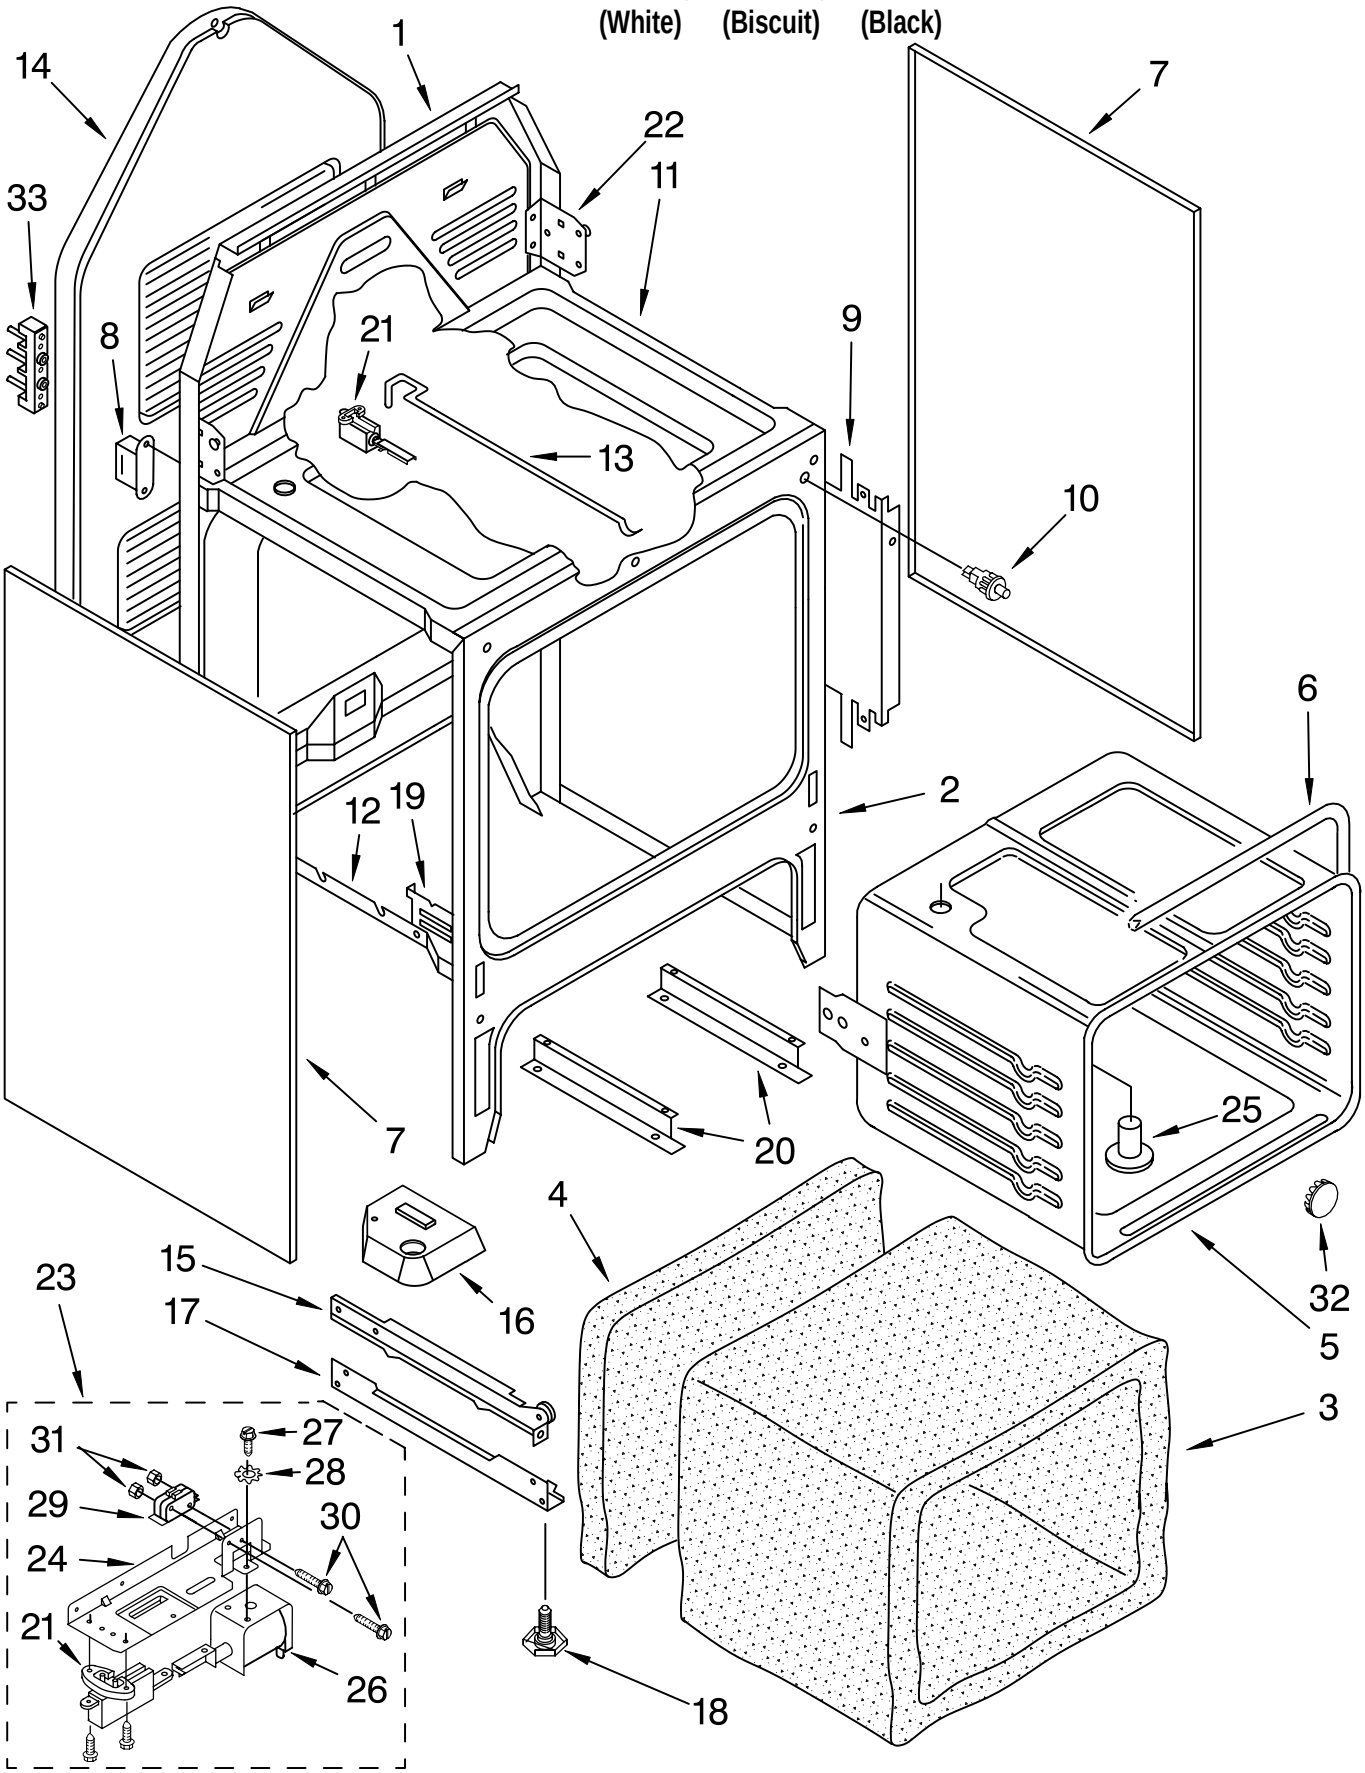

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9754263GM	Oven Liner
6	9755179	Gasket Oven
7		Oven, Side Panel
	9781907PW	White
	9781907PC	Biscuit
	9781907PB	Black
	9780265	Screw (4) 10 x 3/8
8	9755437	Ballast
	9780265	Screw (1) 10 x 3/8
9	9780664	Shield, Insulation
	9780265	Screw, (2) 10 x 3/8
10	9752798	Door Switch (oven Light)
11	9750479GM	Burner Box
	9780265	Screw (7)
	83205	Washer (3)
	9780275	Screw, (2) 8 x 3/8
12	9750142	Oven Bottom
	9780265	Screw (9) 10 x 3/8
13	9750523	Rod, Lock
14	9750150	Panel, Rear
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
	9780265	Screw (2) 8 x 3/8
16	9782330	Block, Balance
17	9750147	Bottom Rail (2)
	9780265	Screw, (8) 10 x 3/8
18	312701	Foot, (4)
19	9782005	Receiver, Hinge (R or L)
	9780265	Screw, (2) 10 x 3/8
	9780272	Screw, (2) 8 x 3/8
20	9781904	Support Rail (2) (Broiler Pan)
	9780265	Screw (2)
21	9752462	Single Position Device (Not Serviced)
	9780265	Screw, (2) 10 x 3/8
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
	9780265	Screw, (4) 10 x 3/8
23	9752404	Oven Lock Assembly
	9780265	Screw, (2) 10 x 3/8
24	9750526	Bracket, Lock
	9780265	Screw, (2) 10 x 3/8
25	9753091	Vent Tube
26	9752409	Solenoid
27	422222	Screw, (2) 10−32 x 5/16
28	424238	Washer, #10 (2)
29	9750965	Switch, Interlock
30	9750887	Screw, (2)
31	9750888	Nut, (2)
32	9780578	Button, Plug
33	258076	Terminal Block
	98884	Screw
	112432	Nut (4)

OVEN PARTS

For Model: WLP34800, WLP34200, WLP34900
(White) (Biscuit) (Black)

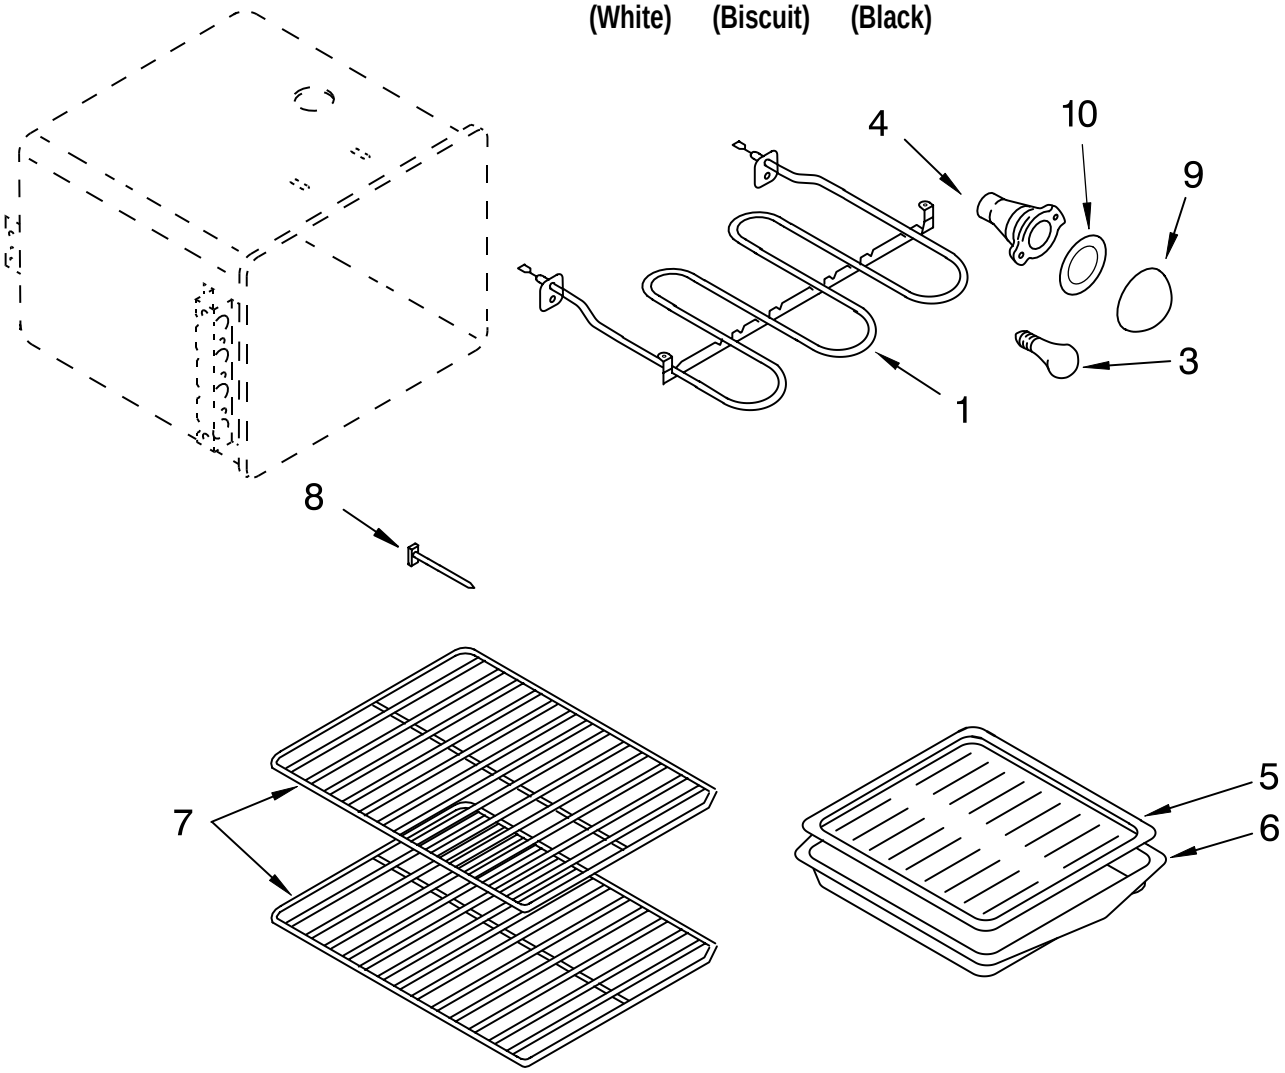

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	9750211	Element, Broil
	9781509	Screw, Elements 8−32 x 3/8
	340184	Screw, (2) 10 x 1−1/2
3	8935	Bulb, Oven
4	9781050	Socket, Light
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard (2)
8	9782081	Sensor, Oven
	9780265	Screw, (1) 10−16 x 3/4
9	9781049	Len's, Light
10	3184533	Gasket, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Model: WLP34800, WLP34200, WLP34900
(White) (Biscuit) (Black)

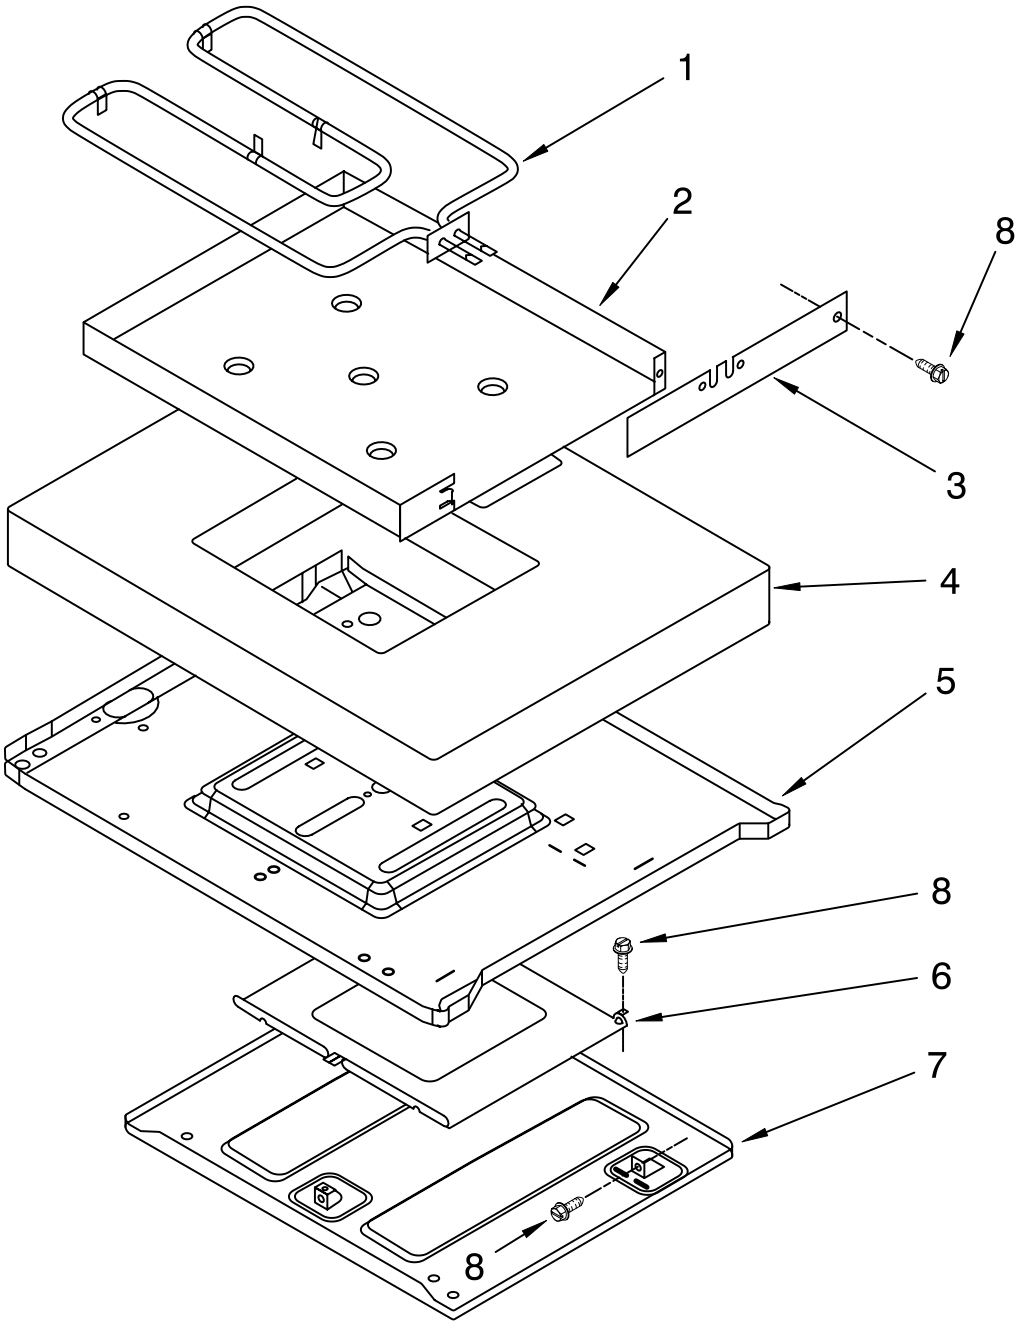

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9782048	Pan, Hidden Bake
3	9782049	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9782050	Plate, Reflector
7	9782051	Shield
8	9782065	Screw, 10−16 x 3/4

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Model: WLP34800, WLP34200, WLP34900

(White) (Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

NOTE: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)

CLEANER, COOKTOP

3184477	Glass Cleaner
3183488	Scraper

ACCESSORIES

241430	Foil, Aluminum Oven (18" X 25')

LUBRICANT

261582	Grease

WIRING HARNESS PARTS

9782135	Harness, Wire (Main)
9751014	Harness, Wire (Cooktop)
9755472	Harness, Wire (Flourescent)
9752612	Harness, Wire (Door Switch)
9752771	Harness, Wire (Cooktop Control)
9753683	Harness, Wire (Hidden Bake)
9751003	Ground
9755404	Power Cord
423247	Screw
20082084	Tie, Wire
690989	Screw, Ground
9755473	Harness, Outlet

ANTI−TIP KIT

9752848	Anti−Tip Kit